

Dynorbital-Spirit®

Air-Powered Random Orbital Sander

ABRASIVE CAPACITY
ABRASIVE DISCS
 3" (76 mm), 3-1/2" (89 mm),
 5" (127 mm) and 6" (152 mm)
 diameter

Hundreds of Industrial Applications

Non-Vacuum

- Includes low profile, premium urethane weight-mated sanding pad.
- Optional vacuum conversion kits are available to easily convert non-vacuum tool to self-generated vacuum tool or central vacuum tool (see page 155).

Pad Diameter Inch (mm)	3/8" Orbit Models	3/16" Orbit Models	3/32" Orbit Models
3 (76 mm)	59100	59105	59110
3-1/2 (89 mm)	59000	59015	59030
5 (127 mm)	59005	59020	59035
6 (152 mm)	59010	59025	59040



Self-Generated Vacuum

- Includes low profile, premium urethane weight-mated sanding pad.
- Ready for connection to optional portable self-contained dust collection system (50617 shown; see page 156).

Pad Diameter Inch (mm)	3/8" Orbit Models	3/16" Orbit Models	3/32" Orbit Models
3 (76 mm)	59103	59108	59113
3-1/2 (89 mm)	59003	59018	59033
5 (127 mm)	59008	59023	59038
6 (152 mm)	59013	59028	59043



 
Central Vacuum

- Includes low profile, premium urethane weight-mated sanding pad.
- Has 1" (25 mm) outside diameter vacuum port, for easy connection to central vacuum system.

Pad Diameter Inch (mm)	3/8" Orbit Models	3/16" Orbit Models	3/32" Orbit Models
3 (76 mm)	59104	59109	59114
3-1/2 (89 mm)	59004	59019	59034
5 (127 mm)	59009	59024	59039
6 (152 mm)	59014	59029	59044



3/8" (10 mm) Dia. Orbit
 For Aggressive Sanding



3/16" (5 mm) Dia. Orbit
 For General Sanding



3/32" (2.5 mm) Dia. Orbit
 For Ultra-Fine Sanding



For efficient random orbital sanding and uniform finish, move the tool in "north-to-south" pattern, then change to "east-to-west" pattern. Be sure to sand complete surface in each pattern.

Remember the rule of "start ON, stop OFF." Place the tool ON the work surface before starting it, and move running tool OFF the surface before stopping it. This will help to prevent unwanted swirl marks.

