



Pencil Grinder – Turbine-Driven Air Motor

Models: 51622, 51623, 51624, 51269, 51630, 51631, 51632, 51633, 51634, 51700, 51701, 51702, 51703, 51704, 51705, 51706, 51707, 51708, 51730, 51731, 51732, 51733, 51750, 51753, 51756

94999 – Air Bushing Tool

- Use to remove the 51662 Air Bushing.

96406 – Pilot Punch, .180" (4.57 mm) Diameter Stem

- Use to protect drive shaft threads when removing and installing bearings.

96407 – Bearing Retainer Wrench

- Use to remove and install 51548 Bearing Retainer.

96408 – Top Plate Wrench

- Use to remove and install 51655 Top Plate.

96418 – Bearing Press Tool, .623" (15.82 mm) O.D., .375" (9.53 mm) I.D.

- Use to install 51651/51686 Bearing.

96419 – Bearing Press Tool, .498" (12.65 mm) O.D., .315" (8 mm) I.D.

- Use to install 51544/51685 Bearing.

96479 – Extension Retainer Wrench

- Use to remove and install 51548 Bearing Retainer on extension drive shaft models.

96483 – Sleeve Assembly Bullet

- Use to assist installation of 51660 Grip on non-vacuum models.

96486 – Collet Insert Removal Tool

- Use to assist removal of collet insert.

96439 – Extension Collet Guard Wrench

- Use to remove and install 51725 Extension Collet Guard.

Visit Our Website: www.dynabrade.com

Email: customer.service@dynabrade.com

DYNABRADE, INC. • DYNABRADE INTERNATIONAL

8989 Sheridan Drive, Clarence, New York 14031-1490 USA
Telephone: (716) 631-0100 • Fax: 716-631-2073 • Int'l Fax: 716-631-2524

DYNABRADE DO BRASIL

Rua Oneda, 632, Sao Bernardo do Campo • SP – CEP 09895-280
Telephone: 55-11-4390-0133 • Fax: 55-11-4399-1067

DYNABRADE EUROPE S.à.r.l.

Zone Artisanale, L-5485 Wormeldange—Haut, Luxembourg
Telephone: +352 768 494 1 • Fax: +352 768 495

DYNABRADE INDIA ABRASIVE POWER TOOLS Pvt Ltd.

EL-54, TTC Industrial Area, M.I.D.C. Mahape, Electronic Zone, Navi Mumbai - 400705
Maharashtra, India • Telephone: +91 22 2763 2226 • Fax: +91 22 2763 2228