





Insert thin pick to assure holes line up Both surfaces to be flush


As an aid to installation, collapse the Retractable Handle Assembly (3).

Properly orient the assembly and insert both sides into tool box channels.

Holes of Retractable Handle Assembly (3) must line up with holes on the back of tool box body prior to securing with screws (4).

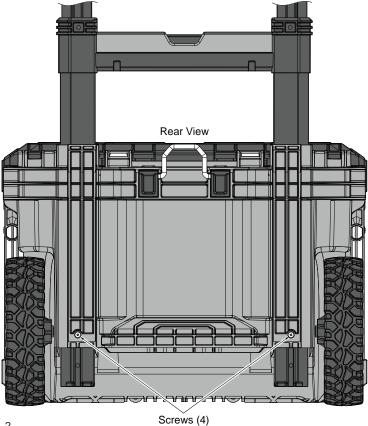


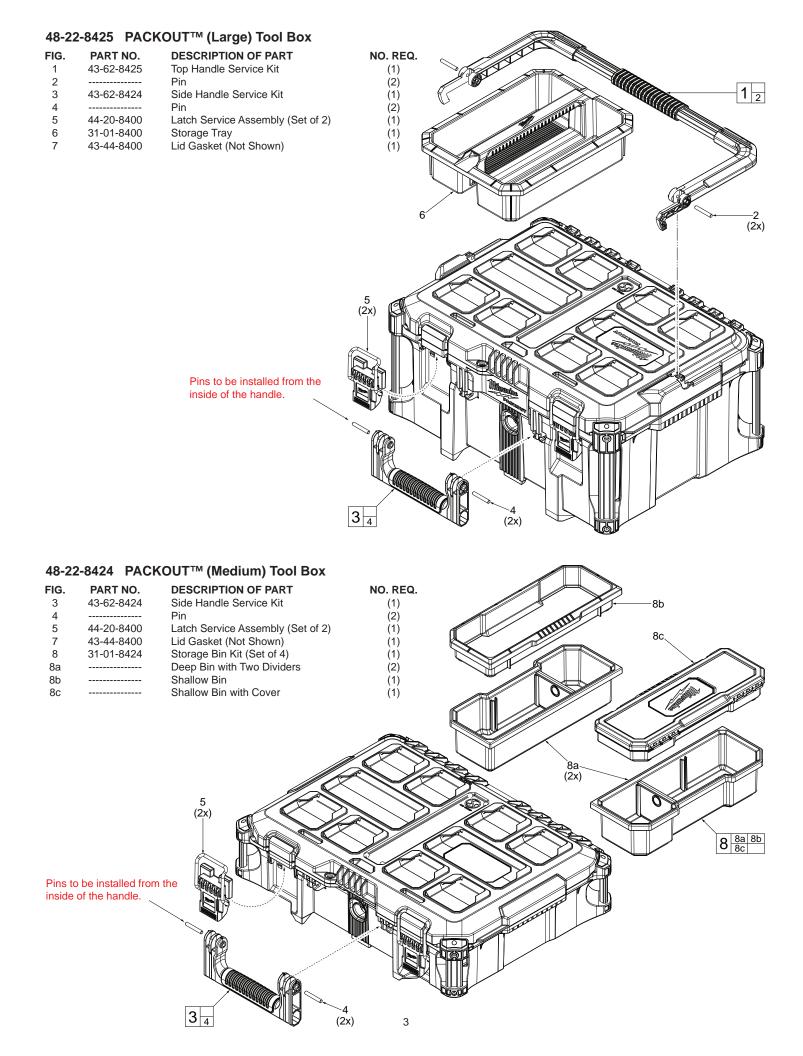

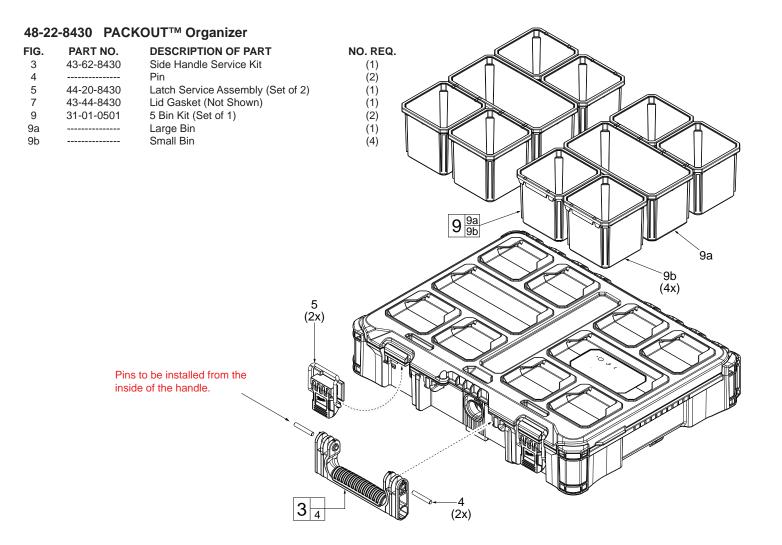

48-22-8435 PACKOUT™ Compact Organizer

PART NO.	DESCRIPTION OF PART
43-62-8435	Side Handle Service Kit
	Pin
43-44-8435	Lid Gasket (Not Shown)
31-01-0501	5 Bin Kit
	Large Bin
	Small Bin
	43-62-8435 43-44-8435

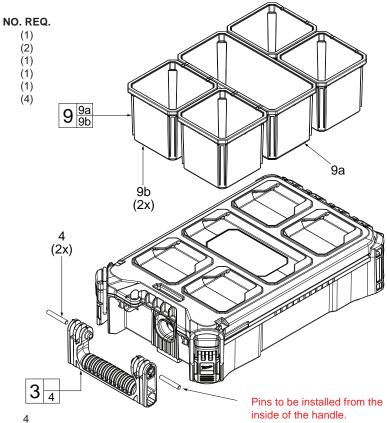

 48-22-8310
 10" PACKOUT™(Small) Storage Tote


 48-22-8315
 15" PACKOUT™ (Medium) Storage Tote

 48-22-8320
 20" PACKOUT™ (Large) Storage Tote






To remove a damaged locker system, flip tote upside down and approach tote from the bottom of base. Insert a large flat blade screwdriver in middle of locking carriage as shown. Lightly pry carriage upward out of base opening. Remove and discard old locking carriage and spring.

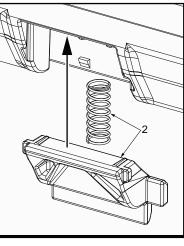


No. 44-20-8300 Locker Kit For early production PACKOUT™ Storage Totes

To install a Locker Kit (2), align spring as shown and guide the tabs of locking carriage in channels of tote base. Push locking carriage upward to snap into place.

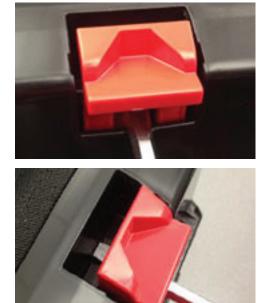



To remove a damaged locker system, flip tote over on the side and approach tote from the bottom of base. Insert a large flat blade screwdriver in middle of locking carriage as shown. Lightly pry carriage upward out of base opening. Remove and discard old locking carriage.

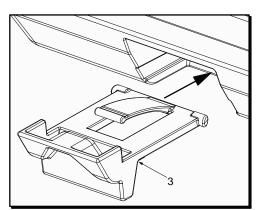

No. 44-20-0305 Locker For later production PACKOUT™ Storage Totes

To install a new Locker (3), guide the tabs of locking carriage in channels of tote base. Push locking carriage forward to snap into place.

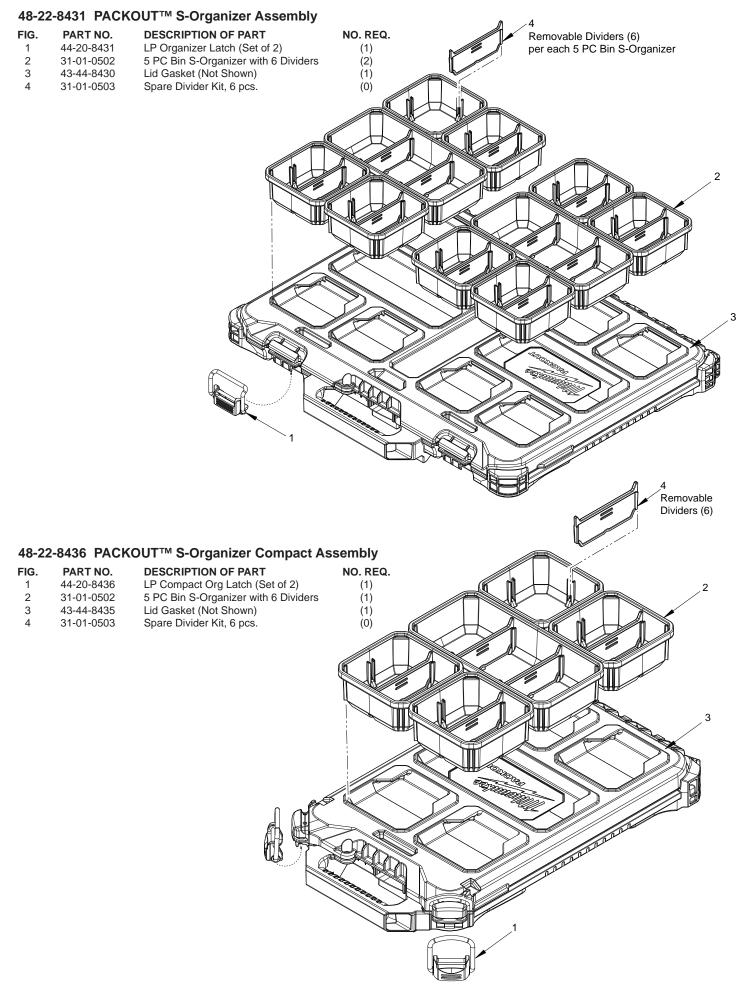

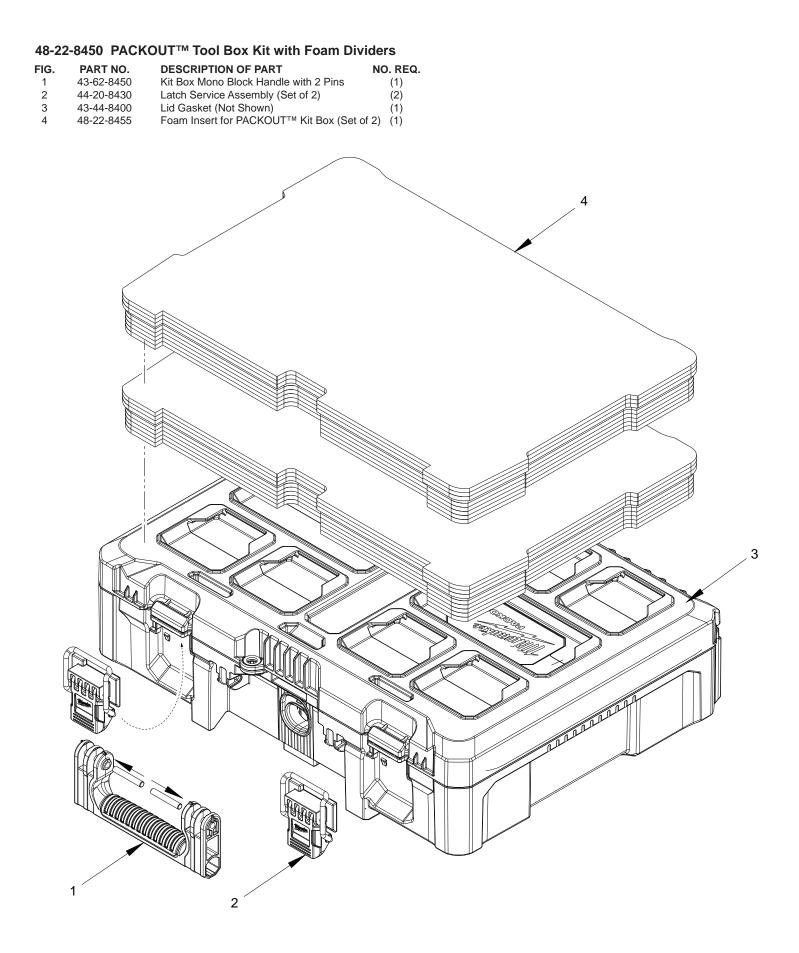



48-22-8322 20" PACKOUT™ (Large) Tool Bag*



*48-22-8321 15" PACKOUT™ (Medium) Tool Bag *48-22-8322 20" PACKOUT™ (Large) Tool Bag

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	45-56-8300	Shoulder Strap (For both tote models)	(1)
2	44-20-8300	Locker Kit (For early versions of 48-22-83	321)
		See page two	(1)
3	44-20-0305	Locker (For 48-22-8322 and later version	IS
		of 48-22-8321) See page 5	(1)

SEE PAGE 5 FOR INSTRUCTIONS ON REMOVING SELECTION AND INSTALLING BOTH LOCKER SYSTEMS







48-22-8301 PACKOUT[™] Jobsite Backpack



48-22-8302 PACKOUT™ Jobsite Cooler






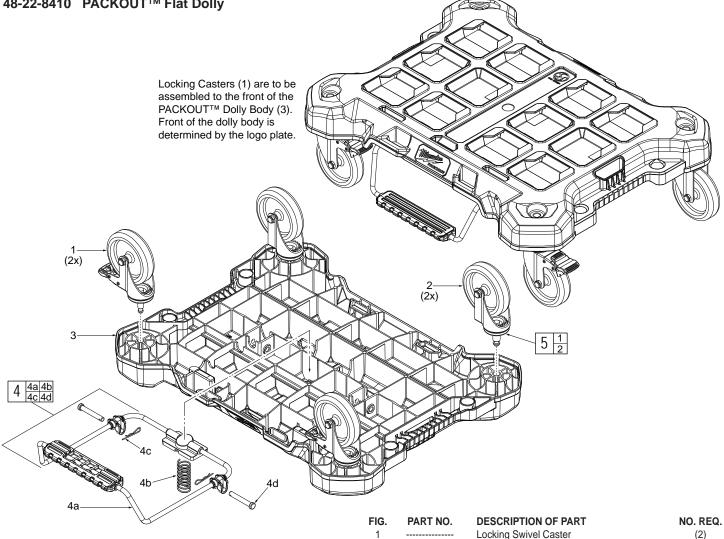


FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1		Locking Swivel Caster	(2)
2		Swivel Caster	(2)
3		Dolly Base	(1)
4	14-04-8410	Dolly Foot Brake Kit	(1)
4a		Dolly Foot Brake	(1)
4b		Spring	(1)
4c		Cotter Pin	(2)
4d		Retaining Pin	(2)
5	45-94-8410	Swivel Caster Kit (Set of 4)	(1)

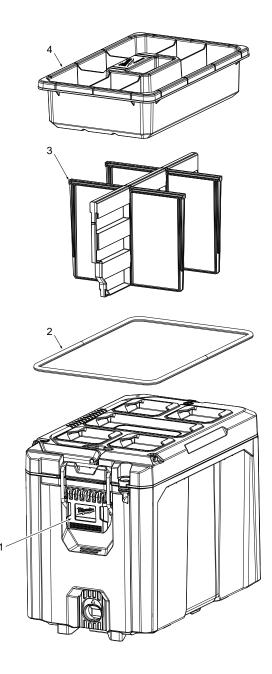

Note:

Procedure for removal and installation of the 44-20-8422 Latch (1). Removal:

- Indo latch from PACKOUT lid.
 Insert a flathead screwdriver in-between latch assembly and PACKOUT base to pry over the tabs. (Fig.1)
 Pull metal latch down to remove.

Installation:

- Insert Latch Assembly into channel.
 Attach the metal latch to the lid. (Fig.2)
 Close latch to secure Latch Assembly in place inside the channel.

48-22-8422 PACKOUT[™] Compact Toolbox

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	44-20-8422	Latch Assembly	(1)
2	43-44-8422	Gasket	(1)
3	31-01-8423	Dividers	(1)
4	31-01-8422	Tray	(1)

Note: Tray, Dividers and Gasket illustrated outside of PACKOUT, is to be assembled on the inside.

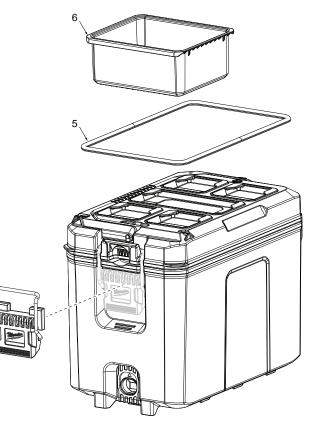




Fig. 2



48-22-8460 PACKOUT™ Compact Cooler

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	44-20-8422	Latch Assembly	(1)
5	31-01-8460	Tray	(1)
6	43-44-8460	Gasket	(1)